



 
WARNING:

Acrylic screens scratch and scuff easily. After removing protective film, immediately and carefully install the screen. DO NOT remove protective film from acrylic screens, then stack them in a pile or against each other. Experience shows this will cause marring and scratching.


Clamp Modesty Screen (Below Desk Top) Installation Instructions

Step 1 – Put screen in clamps (equally spaced) and secure with bolt. Note: longer bolt is used with 3/8" + thick screens and shorter bolt is used on 1/4" thick screens. MAKE SURE SCREEN IS SITTING ON LEDGE (see below) to get proper tension.

Step 2 – For perfect screen alignment follow the following steps: Attach to underside of top by removing double stick tape release paper ON BOTTOM OF CLAMP (ONLY). Align screen and press clamps to underside of top. Loosen screen bolts and remove screen from clamps. Use wood screws (not shown) to secure clamp to underside of top. Re-install screen into clamps.

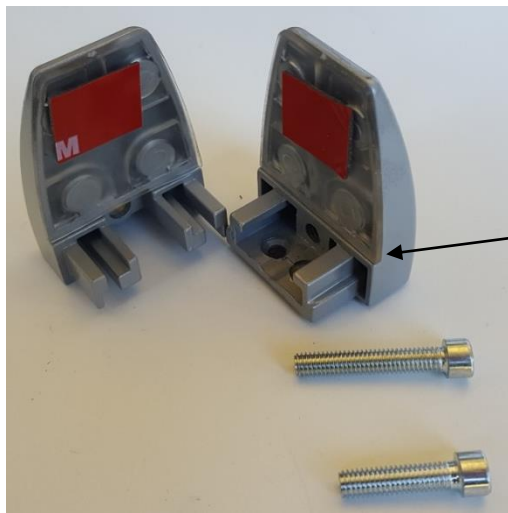

Step 1 – place screen on LEDGE and bolt tight.

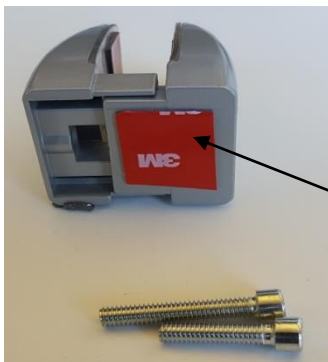

Step 2 - Remove release paper here.



Step 3 - (laminated and fabric modesty only) – attach two “L” Brackets (Part #BTDIV – shown below) to the backside of the modesty and to the underside of the worksurface.

WARNING – use the longer SCREW1 wood screw provided to attach bracket to the worksurface and use the shorter screw (200-05996 #8 – ½” pan head screw) to attach to bracket to modesty.