

 
Proxi Remote Control User Guide

HEIGHT-ADJUSTABLE TABLES




Resetting the base

1. Hold the “down” button until the base reaches its lowest position.
2. Release the “down” button.
3. Hold the “down” button again until the display states “RST”.
5. Hold the “down” button again until the base lowers slightly, then raises back up.
6. Release the “down” button. The base is now ready to use.




Memory Control Instructions

 1. Adjust the base to the desired height.
2. Press “M” followed by the desired preset number.
3. The preset is now set for that height.

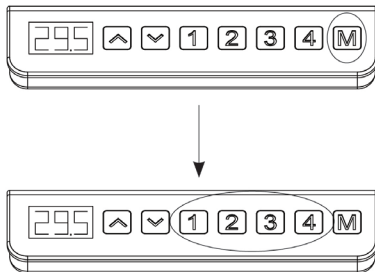


Setting Upper Limit

 1. Adjust the base to the desired maximum height.
2. Hold down the “M” button until the display states “S-”, then release the “M” button.
3. Press the “up” button, then release. Hold the “M” button until the display flashes “999” then changes to display the height.
4. The maximum height is now set.

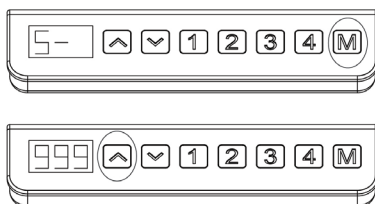


Setting Lower Limit

 1. Adjust the base to the desired minimum height.
2. Hold down the "M" button until the display states "S-", then release the "M" button.
3. Press the "down" button, then release. Hold the "M" button until the display flashes "000" then changes to display the height.
4. The minimum height is now set.

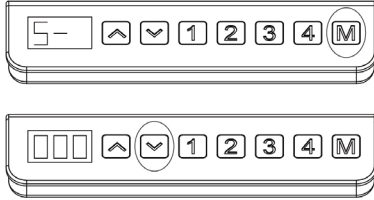


Removing the Upper and lower Limits

 1. Hold down the "M" button until the display states "S-", then release the "M" button.
2. Within five seconds, hold down the "M" button again for two seconds.
3. The display will flash "555", then change to display the height.
3. The upper and lower limits are now removed.

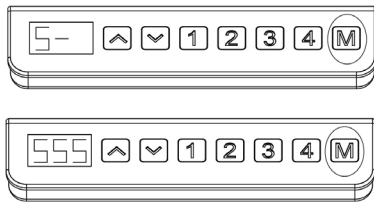


Locking the control

 1. Hold the "M" button until the display switches from "S-" to "LOC".
2. The control is now locked.



Unlocking the control

 1. Hold the “M” button until the display switches from “LOC” to the height display.
2. The control is now unlocked.



5 – Troubleshooting**WARNING**

Resetting the base will require lowering past any set lower limit. Ensure there are no obstructions underneath the base while resetting.

Perform reset procedure if base is not functioning properly or if legs are uneven.

If the display states “RST”, perform reset procedure.

If the display indicates an error message (“ER1” – “ER13”), confirm all wired connections are secure (legs to cables, cables to control box). Then perform reset procedure.

If the display states “HOT”, let base cool down for twenty minutes before use.

