


ENWORK

# ZORI FREESTANDING L-SHAPED SCREEN INSTALLATION GUIDE

SCREENS

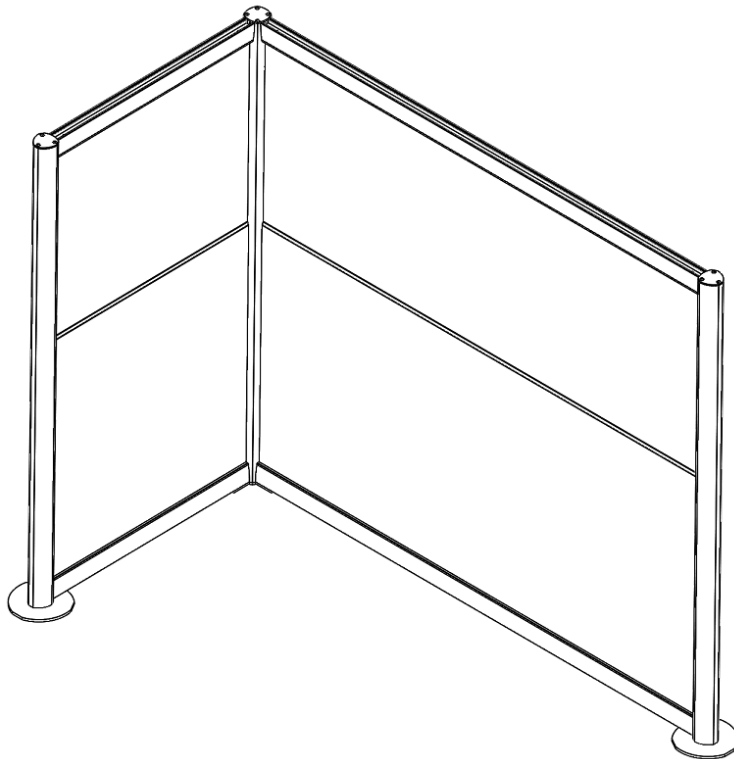

Z I 0 0 0 2

Zori Freestanding L-Shaped Screens Installation Guide – Rev A.

**WARNING:**


Acrylic screens scratch and scuff easily. After removing protective film, immediately and carefully install the screen.

DO NOT remove protective film from acrylic screens, then stack them in a pile or against each other. Experience shows this will cause marring and scratching.


# ENWORK

## INSTALLATION GUIDE


### 1) PARTS AND FASTENERS INCLUDED

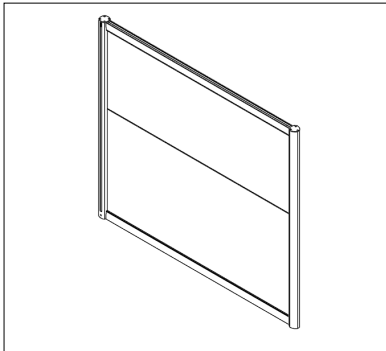


Pre Assembled Panel

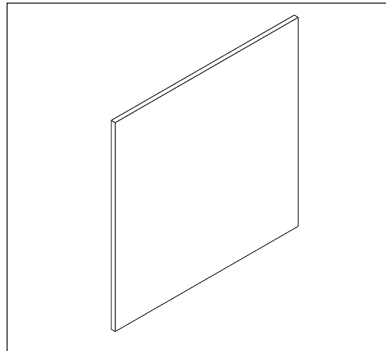


Lower Panel  
(Laminate FRL-1876-xx)

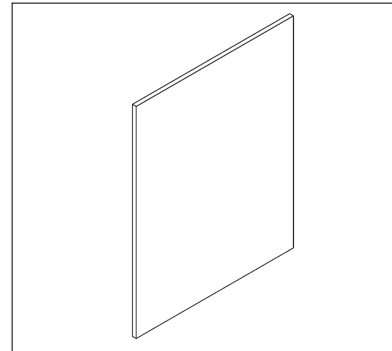


Upper Panel (Acrylic FRX-1046 or  
Acoustic FRX-1064-xx)

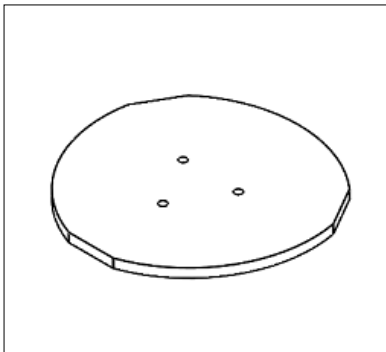


Bottom Plate  
(FRM-1911)

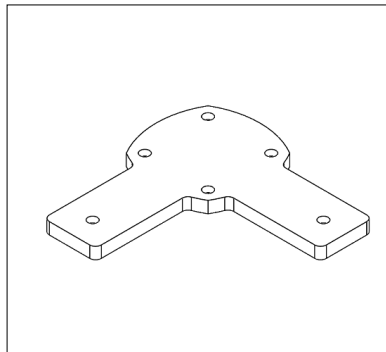


L Cap Plate  
(FRM-1912-L)

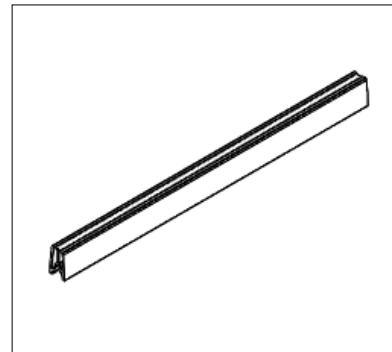


Stretcher - Lower  
(FRA-2065-xx)

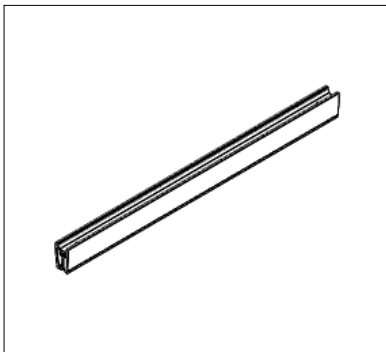

Stretcher - Upper  
(FRA-2065-xx)

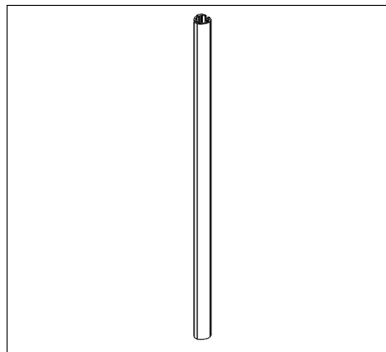

Vertical Support Column  
(FRA-2066-xx)

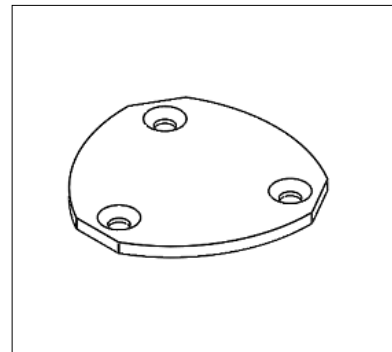


Top Cap Plate  
(CYM-1700)


# ENWORK

## INSTALLATION GUIDE


### 1) PARTS AND FASTENERS INCLUDED CONT.

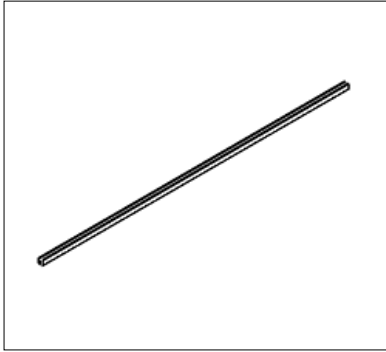


Aluminum U-Channel  
(For Acrylic panel only)  
(FRA-2068-xx)

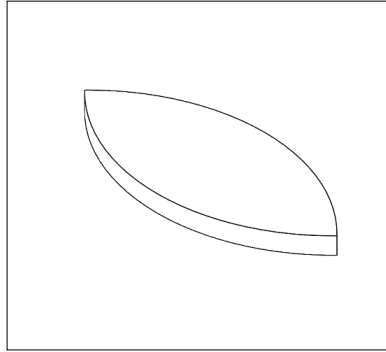


Joiner Biscuit  
(For Acoustic panel only)

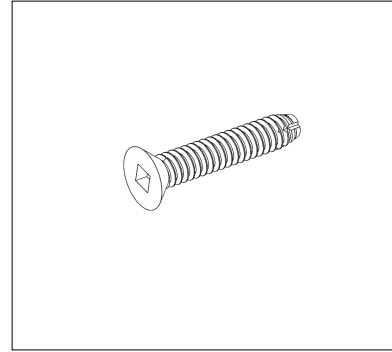

10-24 x 1 Square Drive  
Flat Head Type F Screw

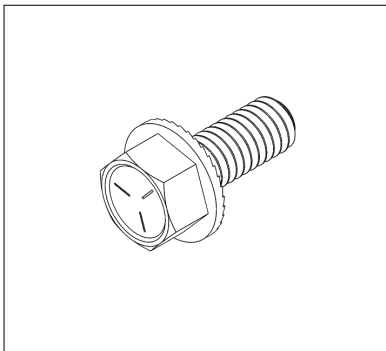

5/16-18 X .75 Serrated  
Flange Head Cap Screw

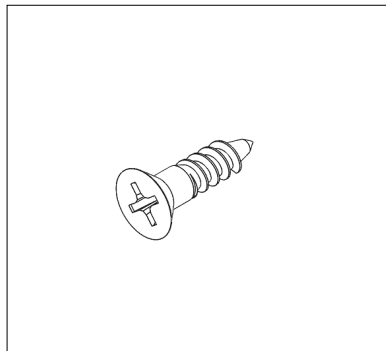


#5 X 1/2" Flat Head Wood  
Screw, Phillips


# ENWORK

## INSTALLATION GUIDE

### 2) TOOLS AND SUPPLIES REQUIRED

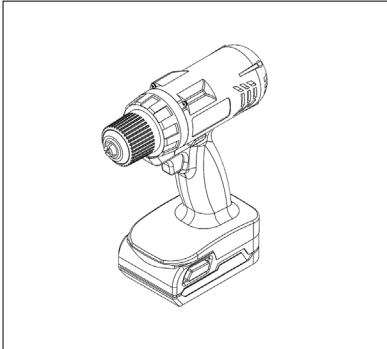

Drill

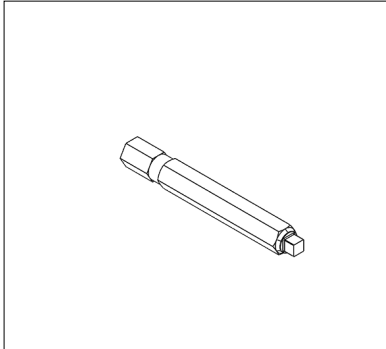

Square Head bit



1/2 in Wrench  
(ratcheting recommended)

# ENWORK

## INSTALLATION GUIDE

### 3) ASSEMBLY:

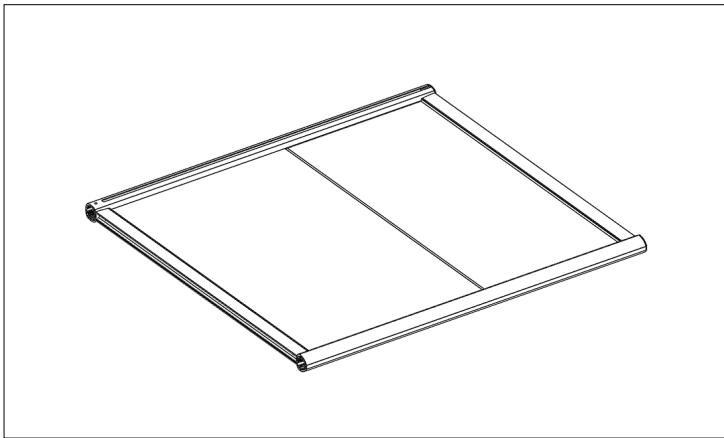


FIGURE 1

Lay pre-assembled Panel flat on a non-marring surface.

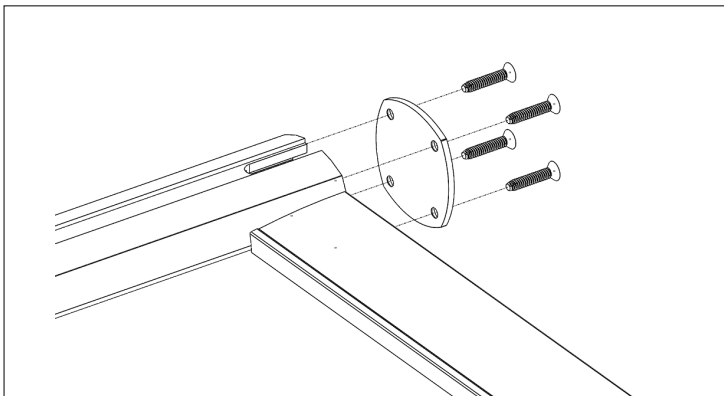


FIGURE 2

Remove Cap Plate and 10-24 x 1 Square Drive Flat Head Screws from the slotted end of the Vertical Support Column.

(Set aside to be re-installed later)

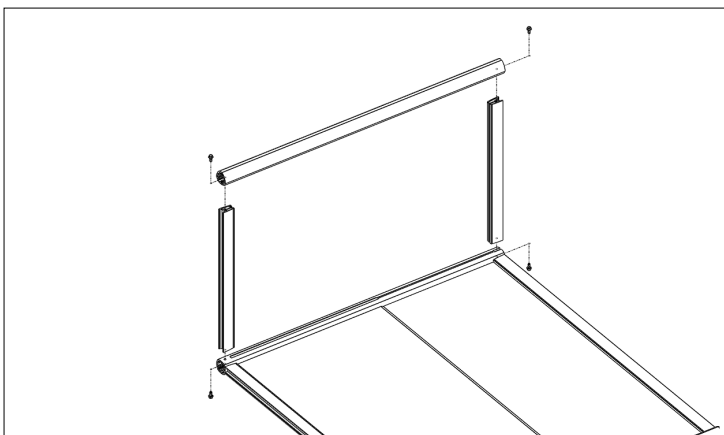


FIGURE 3

Install the Upper and Lower Stretchers and the Vertical Support Column using (4) 5/16-18 X .75 Cap Screw.

Tighten the Lower stretcher bolt.

Snug the Upper stretcher bolt (Slotted end). This is to be dis-assembled later.

# ENWORK

## INSTALLATION GUIDE

### 3) ASSEMBLY:

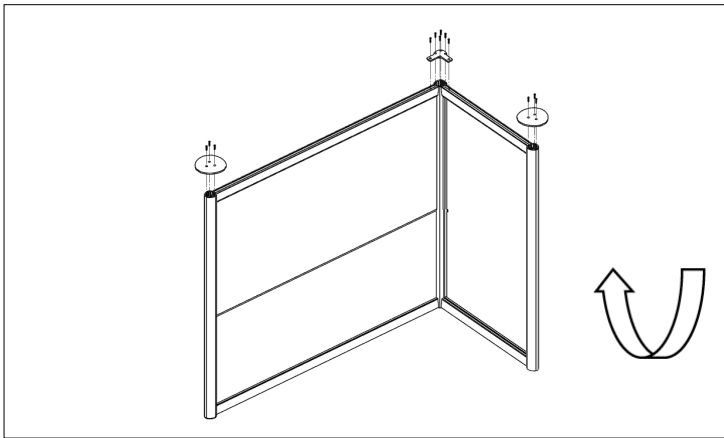


FIGURE 4

Lifts the sub assembly and place it in the upside-down position.

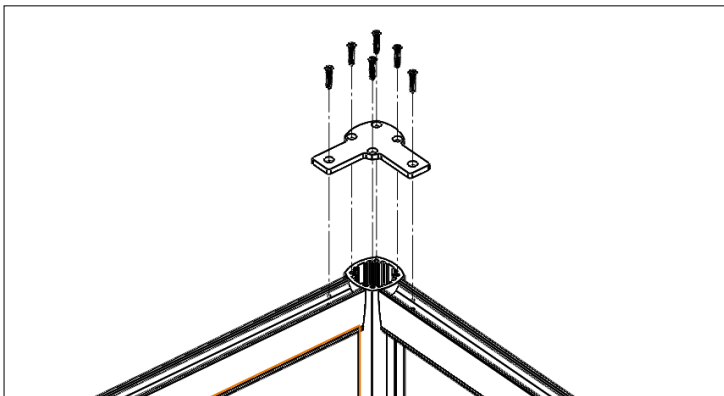


FIGURE 5

Install (2) Bottom Plates and the L Cap Plate using (12) 10-24 x 1 Square Drive Flat Head.

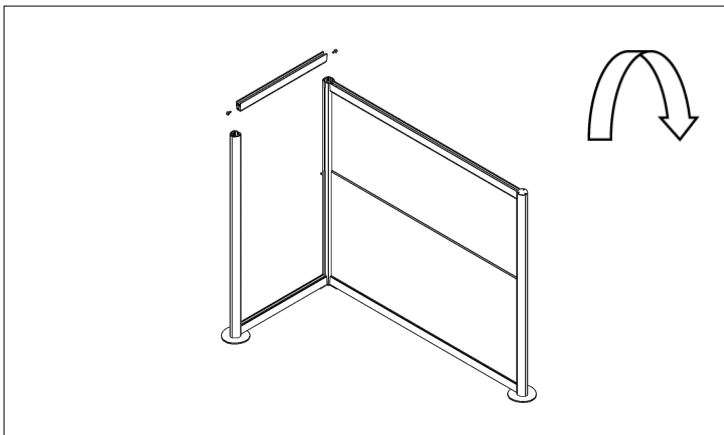


FIGURE 6

Lift the sub assembly and place it in the upright position.

Loosen the (2) 5/16-18 X .75 Cap Screw and remove the Upper Stretcher. Set aside to be re-installed later.

# ENWORK

## INSTALLATION GUIDE

### 3) ASSEMBLY :

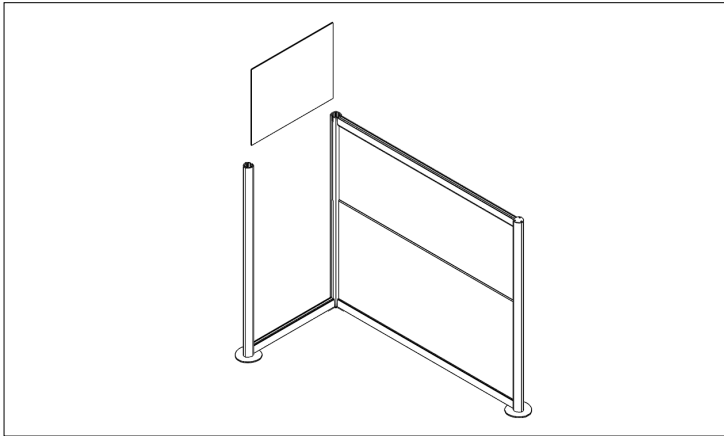


FIGURE 7

Install Panel.

**Note:** The number of panels will depend on screen configuration.

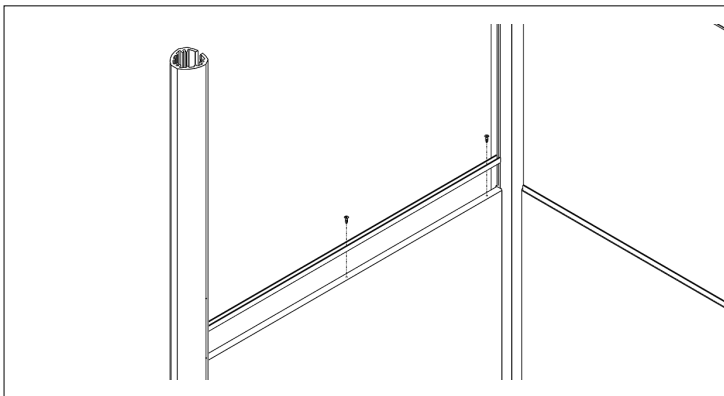


FIGURE 8

**NOTE: For Acrylic Installation**

Place Aluminum U-Channel on the edge of the Lower Laminate Panel and fasten using the supplied #5 X 1/2" Flat Head Wood Screws.

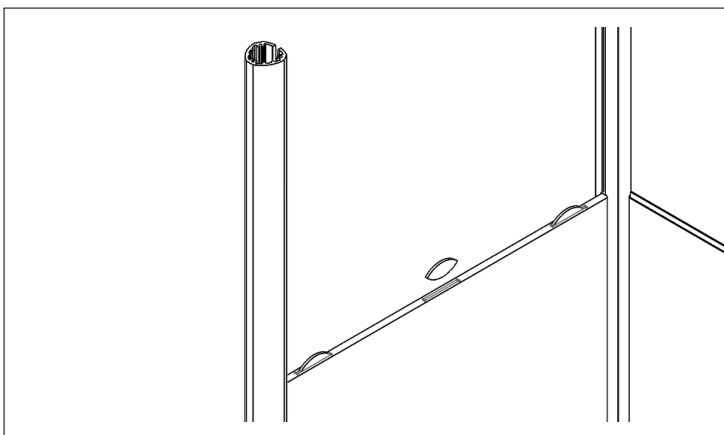


FIGURE 9


**NOTE: For Acoustic Installation**

Place Joiner Biscuits into the routed slots of the Lower Laminate Panel and install the Acoustic panel.

# ENWORK


## INSTALLATION GUIDE

### 3) ASSEMBLY:

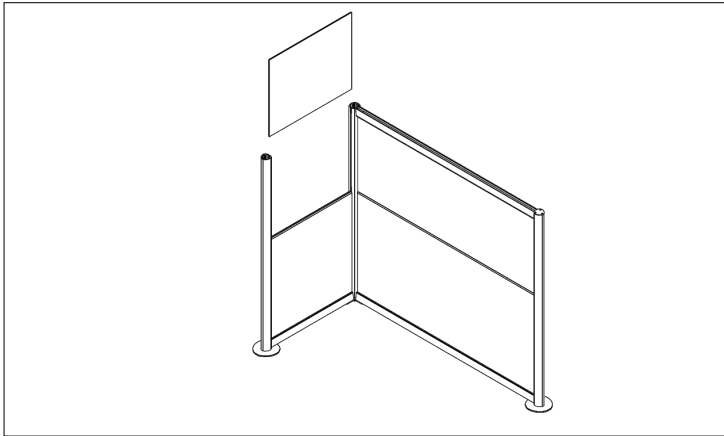

Install Upper Panel.

FIGURE 10

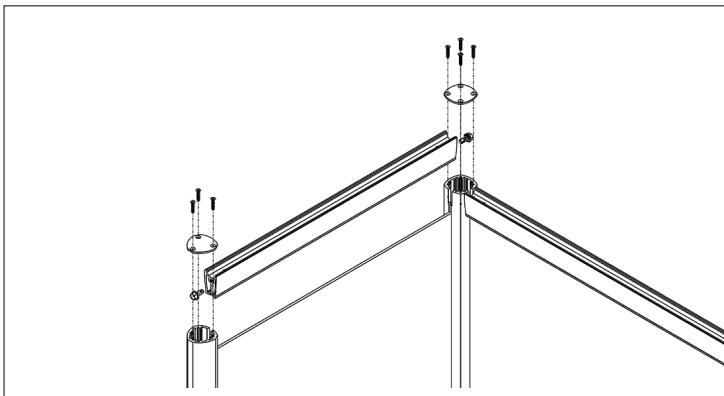


Reinstall the Upper Stretcher and tighten the 5/16-18 X .75 Cap Screw (from Fig 6).

Reinstall the Cap Plate (from Fig 2).

Install Cap Plate CYM-1700 using (4) 10-24 x 1 Square Drive Flat Head.

FIGURE 11

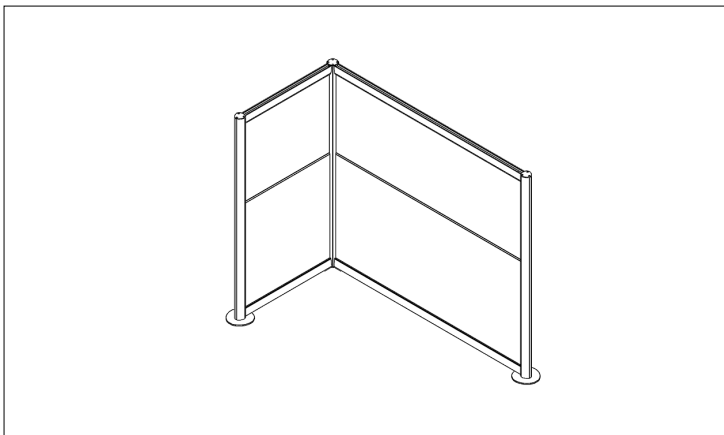

Assembly complete.

FIGURE 12



ENWORK

1.800.815.7251

[www.enwork.com](http://www.enwork.com)

12900 Christopher Dr. Lowell, MI 49331

Specifications subject to change without notice.

Rev 07.2020