

POWER EDGE – TOP FIELD ASSEMBLY

TWO OR THREE SECTION TOPS ASSEMBLED AS FOLLOWS

BOTTOM VIEW OF TOP END SECTION

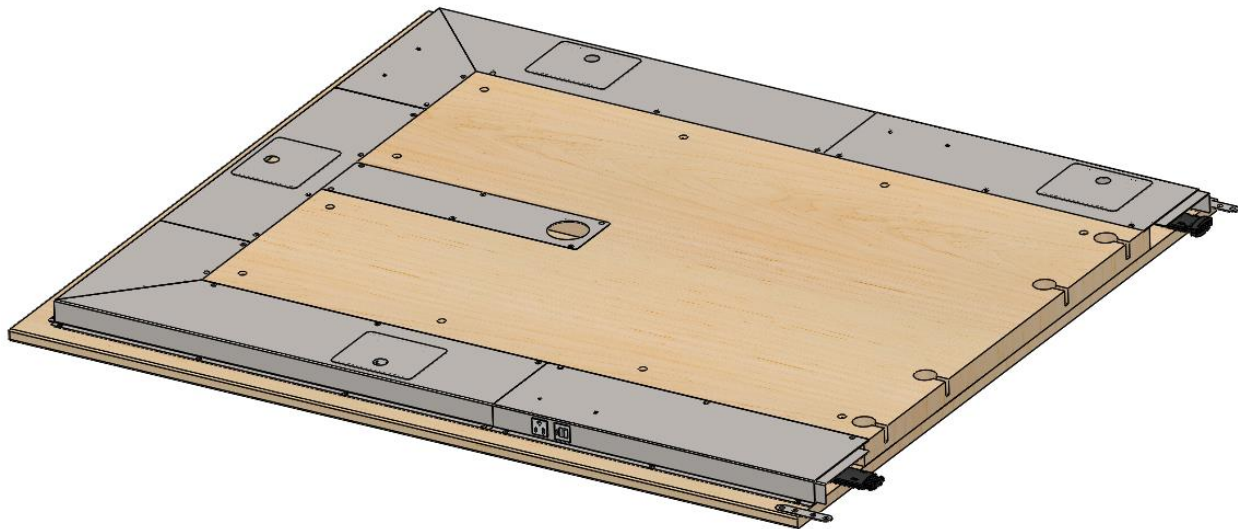


FIGURE 1

Install (Wood Dowels) or (Biscuits) supplied in Hardware Kit.

Connect Jumpers from each section of top make sure Male and Female connectors are aligned correctly.

See Figure 2 for details on out top edge connector plate and Zip Bolt

Once power jumpers for the top sections have been connected, compress joint and install Zip Bolts in locations indicated. Tighten Zip bolts and insert connector plates in position shown secure connector plates with 3/8" Flat Head Screws.

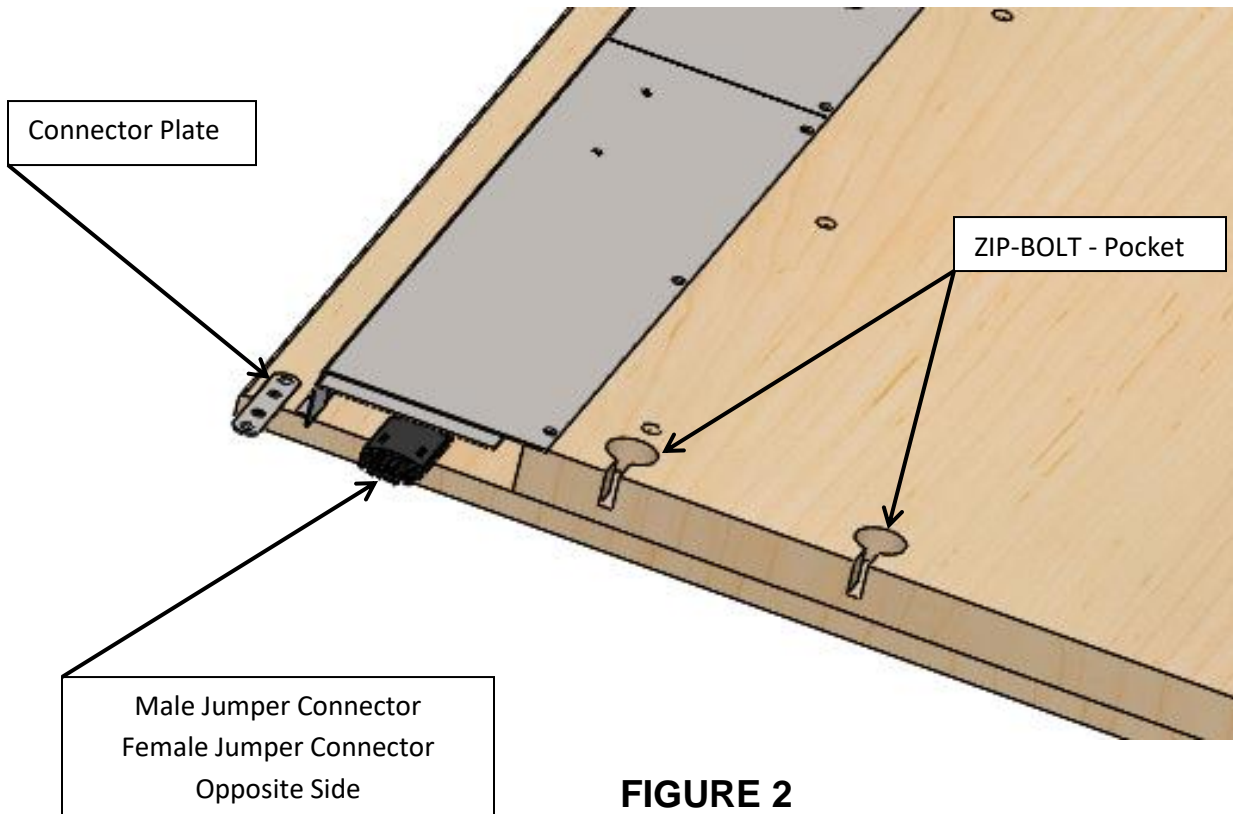


FIGURE 2